



USER MANUAL

Wireless Keyboard

- 1) Place 4 pieces AAA batteries (1,5 V alkaline) as indicated in figure 1.
- 2) Start PC and place the USB dongle in a free USB slot of the PC
- 3) It may take up to a few minutes for the drivers to be installed automatically
- 4) This product is plug and play compatible with Windows PC's, no additional drivers needed.
- 5) Battery save mode is on by default (no use of LED's for num lock, caps lock and scroll lock)
To turn battery save mode off press CTRL + ALT + L for 6 seconds. In this mode the LED's turn of after not typing for 10 minutes. LED's will go on again when typing continues.

The elastomer cover can be cleaned with hospital grade disinfectants including alcohol 80%. Before starting the cleaning process press the "key lock" button until the light goes on. After placing the keyboard in cleaning mode is can be cleaned and the activation of any key does not result in unwanted input. After pressing the CLEAN button again the keyboard will become active and ready for use.

Manufacturer declares that this product is in accordance with essential requirements and other relevant terms of the European regulation 2004/108/EC.

The micro USB port behind the left plug is only for factory debugging, not for customer use.












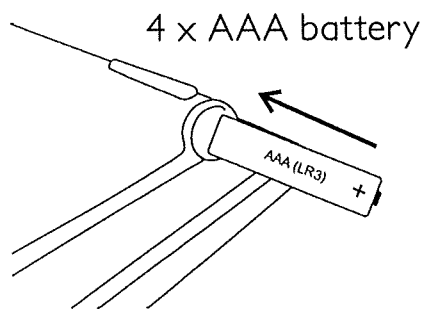


fig.1

Accesia wireless keyboard quick installation guide

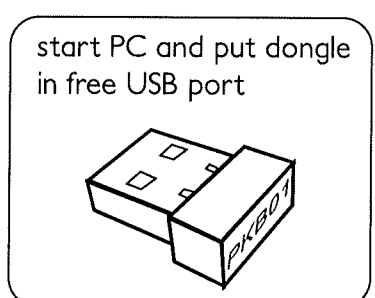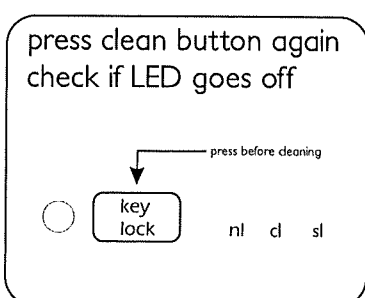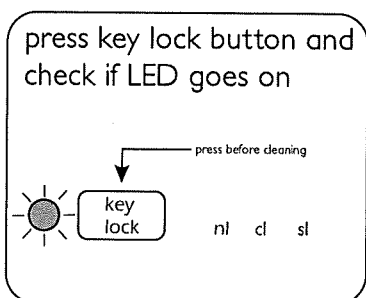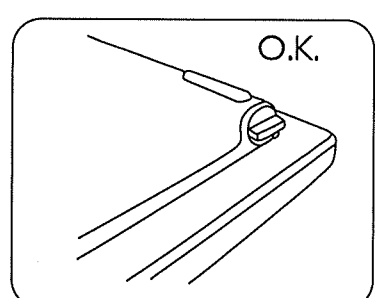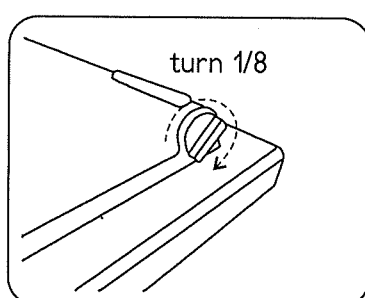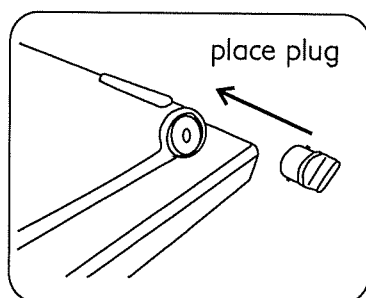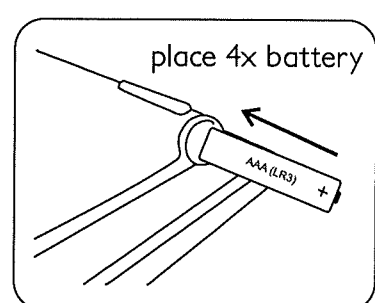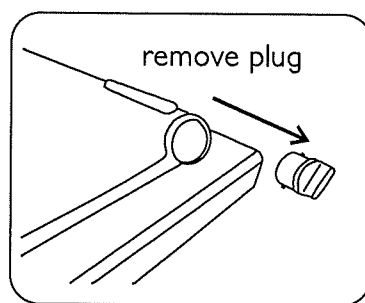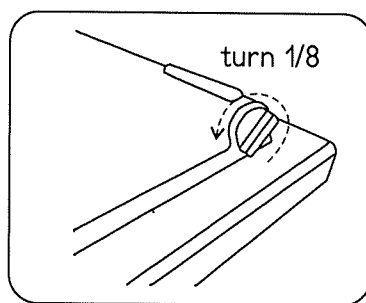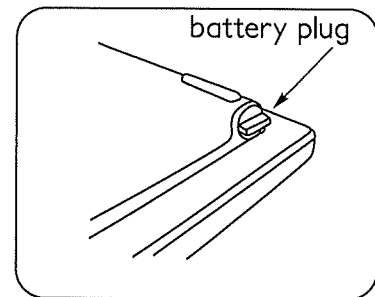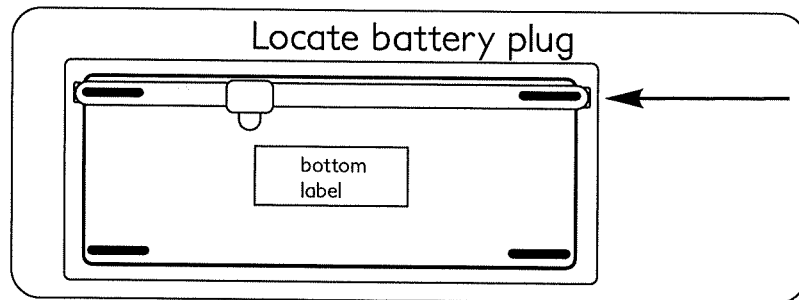

Installation will start automatically
and may take 1 minute.